




90° ANGLE Guidelines

90° ANGLE



From a center of the bend cut the cotton insulation (careful not to damage the inner core!) with circular saw (blade reversed) and bend the jacket in a 45° angle (e.g. cut out a football shape piece) in both directions to achieve a 90° angle.

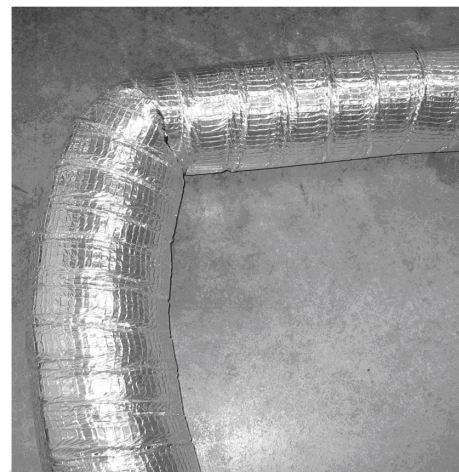

Bend the duct to desired 90° angle and tape the jacket with UL 181 B tape.